

DISK DRIVE OPERATING INSTRUCTIONS

- 1) Make sure that there are no data packs in the data pack drives. Make sure that there are no disks in any of the drives.
- 2) Turn ADAM power on.
- 3) Turn on the power on switches on the front of the disk drive(s).
- 4) Insert the disk, label side up with the write protect notch on left side, into Disk Drive 1.
- 5) Pull Disk latch down to close door.
- 6) Press Computer Reset to load program off of disk.
- 7) The Disk-In-Operation LED (located on the front of the drive above the power-on LED) is a warning. When this light is on, the drive is in operation. The disk should not be removed nor should the door be opened.
- 8) The disk can be removed anytime this light is not on.
- () To reboot a program in the disk drive, press Computer Reset.